

- NOTES: 1. FOR ACTUAL SIZES AND LOCATIONS OF PIPING AND OTHER CONNECTIONS TO THE HEATER, SEE DIMENSIONAL DRAWING.
- 2. REDUCERS, ON THE WATER INLET SIDE, SHOULD BE LOCATED ADJACENT TO THE HEATER. EXPANSION FITTINGS, ON THE WATER INLET SIDE, SHOULD BE LOCATED AS FAR AS POSSIBLE FROM THE HEATER.

 3. DRAIN VALVE SHOULD BE PIPED DIRECTLY TO A FLOOR DRAIN. RELIEF VALVE SHOULD BE PIPED VERTICALLY TO A
- HEIGHT 19" ABOVE THE FLOOR.
- 4. HEATERS SHOULD BE PIPED REVERSE RETURN OR BALANCING DEVICES ON THE OUTLETS SHOULD BE EMPLOYED 5. REFER TO SMARTPLATE APPLICATIONS GUIDE, SP-1010, TO DETERMINE IF SYSTEM REQUIRES A BUFFER TANK. 6. INSTALL A HOSE CONNECTION AT THE HOT WATER OUTLET.

NORTHVALE, NJ 07647

WATER SMARTPLATE
TO WATER HEAT EXCHANGER MULTIPLE UNITS

DWN.BY JK DATE 042709 SCALE NTS APPD. CZ DATE 042709 SD-A-773 REV. ϖ